### **FRED Refresh Kit**

for Bostrom T Series, Baja, LSO, & Wide Ride

# EDECHEN

Bostrom

# Does This Look Familiar?




It doesn't have to.

Why ride another day in such discomfort?



- Easy 30 minute installation with step by step instructions so you can get back to comfort fast
- Not only refresh, but enhance your ride with our new ergonomic Pro Ride cushion & back poly giving you better than before comfort
- Keep your existing suspension, saving you time, effort, and money
- Fits any Bostrom T Series, Baja, LSO, or Wide Ride series seat, so you don't have to wonder about matching different kits to your seat
- We built your seat, so you can be confident that our kit fits and works with it

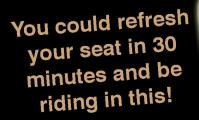





## **FRED Refresh Kit**

for Bostrom T Series, Baja, LSO, & Wide Ride

- Kits Include
  - Back foam
  - Back cover
  - Cushion foam
  - Cushion cover
- · Armrests sold separately to match
  - Base PN1234480-XXX
  - Use same material & color code for seat refresh kit as armrest to get match
  - Armrests are interchangeable, left & right

- Tools Required
  - Socket wrench
  - 15mm socket
  - Wire cutters
  - Phillips screw driver
  - Hammer
- Additional Tools for Armrests
  - 1.5" hole saw
  - · Common screw driver



Description	Hi Back
FRED Refresh Kit, Pro Ride Hi Back	6222400

Armrests are not included in FRED Refresh Kits. If your seat had traditional 14" armrests or if you want to add armrests you will need to purchase new ones. The traditional arms will not fit on the seat once the FRED kit is installed. To purchase long 16" Pro Ride style arms, use base PN 1234480-XXX and complete with trim to match FRED kit trim.

#### **Extend Your Seat Life**

Has your current seat cushion been ridden well beyond its expected life? Have you patched and taped the seat until it just won't patch any more? Do you want to improve your comfort without replacing the whole seat? FRED is your solution!





CVG · Piedmont
50 Nances Creek Boulevard (PO Box 566)
Piedmont, AL 36272
1-800-459-7328
bostromseating@cvgrp.com
www.bostromseating.com



Add "-XXX" to end of each of the seat or armrest part numbers shown, replacing XXX with the material - color code shown in chart above.

